

# Zebra ZD410 Label Printer Configuration

---

This document provides detailed instructions for changing the label size and orientation for the Zebra ZD410 Label Printer installed on Cornerstone\* systems.

## Determine how the printer is connected

### Connected with a USB cable:

- All operations will be performed on the station to which the printer is physically connected.

### Connected via an external or internal print server using an Ethernet cable:

- All operations will be performed on the Server computer.

## Required Label Size and Orientation for use with Cornerstone software

**Note:** It is important to use the ZDesigner ZD410 ZPL (203 dpi) version of the driver. If any other version is used, the labels will not print correctly.

### Prescription Label Settings:

1. Open **Run**.
2. Type **Control Printers**.
3. Open the Zebra printer preferences window:  
**Windows 10, Windows 8, Windows 7, Windows Server 2012, and Windows Server 2008**
  - a) Right-click the Zebra printer.
  - b) Click **Printer Properties**.
  - c) On the General tab, click **Preferences**.**Windows XP, Windows Vista and Windows Server 2003**
  - a) Right-click the Zebra printer.
  - b) Click **Properties**.
  - c) Click **Printing Preferences**.
4. After opening preferences, set the following settings on the **Options** tab:
  - a) Click the radio button next to **Landscape**.
  - b) Set the **Width** to **2.0 (5.08 CM)**.
  - c) Set the **Height** to **3.50 (8.89 CM)**.
  - d) Click **Ok**.
5. Click on the **Advanced** tab, then click on **Printing Defaults**.
6. On the **Options** tab, set the following settings:
  - a) Click the radio button next to **Landscape**.
  - b) Set the **Width** to **2.0 (5.08 CM)**.
  - c) Set the **Height** to **3.50 (8.89 CM)**.
  - d) Click **Ok**.
7. Click **Ok**.

### Test Tube Label Settings:

1. Open **Run**.
2. Type **Control Printers**.
3. Open the Zebra printer preferences window:  
**Windows 10, Windows 8, Windows 7, Windows Server 2012, and Windows Server 2008**
  - a) Right-click the Zebra printer.
  - b) Click **Printer Properties**.

- c) On the General tab, click **Preferences**.
- Windows XP, Windows Vista and Windows Server 2003**
  - a) Right-click the Zebra printer.
  - b) Click **Properties**.
  - c) Click **Printing Preferences**.
4. After opening preferences, set the following settings on the **Options** tab:
  - a) Click the radio button next to **Portrait**.
  - b) Set the **Width** to **1.25 (3.17 CM)**.
  - c) Set the **Height** to **.84 (2.13 CM)**.
5. Click the **Advanced Setup** Tab.
  - a) Under adjustment, set the **Top** to **0.06**.
  - b) Click **Ok**.
6. Click on the **Advanced** tab, then click on **Printing Defaults**.
7. On the **Options** tab, set the following settings:
  - a) Click the radio button next to **Portrait**.
  - b) Set the **Width** to **1.25 (3.17 CM)**.
  - c) Set the **Height** to **.84 (2.13 CM)**.
8. Click the **Advanced Setup Tab**.
  - a) Under adjustment, set the **Top** to **0.06**.
  - b) Click **Ok**.
9. Click **Ok**.

For assistance, call Cornerstone Support at **1-800-695-2877**.

